Revision date: 13/Feb/2019



Rat Placenta Growth Factor (PGF) CLIA Kit

Catalog No.: abx491048

Size: 96T

Range: 1.37 pg/ml - 1000 pg/ml

Sensitivity: < 0.6 pg/ml

Storage: Store standard, detection reagent A, detection reagent B and the 96-well plate at -20°C, and the rest of the kit components at 4°C.

Application: For quantitative detection of PGF in Rat Serum, Plasma, Tissue Homogenates, Cell Lysates, Cell Culture Supernatants and other biological fluids.

Introduction: Rat Placenta Growth Factor (PGF) is a member of the vascular endothelial growth factor family of proteins. It is implicated in the PI3K-Akt and Rap1 signalling pathways and its mRNA has been shown to increase over the course of gestation. PGF is broadly expressed across tissues, except in the liver where transcription is very low. Silencing the PGF gene reduces complications in murine models of sickle cell anaemia and chronic liver disease.

Principle of the Assay

This kit is based on chemiluminescent immunoassay technology. Anti-PGF antibody is pre-coated onto a 96-well plate. The standards and samples are added to the wells with a biotin conjugated anti-PGF and incubated. Next, Avidin conjugated to HRP is added to each microplate well and incubated. After the mixture of substrate A and B is added only wells that contain PGF will produce chemiluminescence. The intensity of the emitted light is proportional to the amount of PGF in the sample or standard.

Kit components

- 1. One pre-coated 96-well microplate (12 × 8 well strips)
- 2. Standard: 2 tubes
- 3. Standard Diluent Buffer: 20 ml
- 4. Wash Buffer (30X): 20 ml. Dilution: 1:30
- 5. Detection Reagent A (100X): 120 µl
- 6. Detection Reagent B (100X): 120 μl
- 7. Diluent A: 12 ml
- 8. Diluent B: 12 ml
- 9. Substrate A: 10 ml
- 10. Substrate B: 2 ml
- 11. Plate sealer: 4

Material Required But Not Provided

- 1. 37°C incubator
- 2. Luminometer capable of reading 96-well microplates (lag time
- 30.0 secs and read time 1.0 sec/well)
- 3. Multi and single channel pipettes and sterile pipette tips
- 4. Squirt bottle or automated microplate washer
- 5. Distilled or deionized water
- 6. Tubes to prepare standard or sample dilutions
- 7. Absorbent filter papers
- 8. 100 ml and 1 liter graduated cylinders

Revision date: 13/Feb/2019



Protocol

A. Preparation of sample and reagents

1. Sample

Isolate the test samples soon after collecting, analyze immediately or store at 4°C for up to 5 days. Otherwise, store at -20°C for up to one month or -80°C for up to two months to avoid loss of bioactivity. Avoid multiple freeze-thaw cycles.

- **Serum:** Samples should be collected into a serum separator tube. Coagulate the serum by leaving the tube undisturbed in a vertical position overnight at 4°C or at room temperature for up to 60 minutes. Centrifuge at approximately 1000 × g for 20 min. Analyze the serum immediately or aliquot and store at -20°C or -80°C.
- Plasma: Collect plasma using heparin or EDTA as an anticoagulant. Centrifuge for 15 minutes at 1000 × g within 30 minutes of collection. Assay immediately or aliquot and store at -20°C. Avoid hemolysis and high cholesterol samples.
- **Tissue homogenates:** The preparation of tissue homogenates will vary depending upon tissue type this is just an example. Rinse tissues with ice-cold PBS to remove the excess of blood. Weigh before homogenization. Finely mince tissues and homogenize with a tissue homogenizer on ice in PBS and sonicate the cell suspension. Centrifuge the homogenates at 5000 × g for 5 min and collect the supernatant. Assay immediately or aliquot and store at -20°C.
- Cell lysates: Detach adherent cells with trypsin and collect by centrifugation and remove the supernatant. Wash the cells three times in ice-cold PBS and re-suspend cells in PBS. Lyse the cells by ultra-sonification 4 times or freeze at -20°C and thaw to room temperature 3 times. Centrifuge at 1500 × g for 10 min at 2-8°C to remove cellular debris. Collect the supernatant and assay immediately.
- Cell culture supernatants: Centrifuge at approximately 1000 × g for 20 min to remove precipitant. Analyze immediately or aliquot and store at -20°C or -80°C.
- Other biological fluids: Centrifuge at approximately 1000 × g for 20 min to remove precipitant. Analyze immediately or aliquot and store at -20°C or -80°C.

Note:

- » Please bring sample slowly to room temperature. Sample hemolysis will influence the result. Hemolyzed specimen should not be
- » Samples must be diluted so that the expected concentration falls within the kit's range. Sample should be diluted in 0.01 mol/L PBS (PH=7.0-7.2).
- » If the sample are not indicated in the manual's applications, a preliminary experiment to determine the validity of the kit will be necessary.
- » Fresh sample or recently obtained samples are recommended to prevent protein degradation and denaturalization that may lead to erroneous results.
- » Always use non-pyrogenic, endotoxin-free tubes for blood collection.

2. Wash buffer

Dilute the concentrated Wash buffer 30-fold (1/30) with distilled water (i.e. add 20 ml of concentrated wash buffer into 580 ml of distilled water).


3. Standard

Bring samples and all kit components to room temperature. Prepare the Standard with 20 ml of Standard Diluent buffer to make the 1000 pg/ml Standard Solution. Allow the reconstituted standard to sit for 10 minutes with gentle agitation prior to carrying out the serial dilutions; avoiding foaming or bubbles. Label 6 tubes with 500 pg/ml, 250 pg/ml, 125 pg/ml, 62.5 pg/ml, 31.25 pg/ml, and 15.63 pg/ml respectively. Aliquot 0.5 ml of the Standard diluent buffer into each tube. Add 0.5 ml of 1000 pg/ml standard solution into the 1st tube and mix thoroughly. Transfer 0.5 ml from 1st tube to 2nd tube, mix thoroughly, and so on.

Revision date: 13/Feb/2019



1000 pg/ml PGF Solution

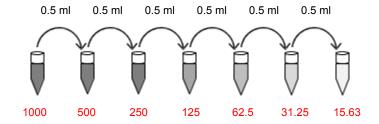

4. Detection Reagent A and B Preparation

Centrifuge Detection Reagent A and B briefly before use. Detection Reagent A and B should be diluted 100-fold with the Diluent A and B and mixed thoroughly. They are sticky solutions, therefore pipette with a slow, smooth action to reduce volume errors. Please discard after use.

5. Substrate working solution Preparation

Substrate A and B should be mixed with a ration of 99:1 respectively and mixed thoroughly. For example, prepare 1 ml of substrate working solution by mixing 0.99 ml of Substrate A and 0.01 ml of Substrate B.

B. Assay Procedure

Equilibrate the kit components and samples to room temperature before use. It is recommended to plot a standard curve for each test.

- Set standard, test sample and control (zero) wells on the pre-coated plate respectively, and then, record their positions. It is recommended to measure each standard and sample in duplicate. Add the solution at the bottom of each well without touching the side walls.
- 2. Add 100 µl of the diluted standards into the standard wells. Aliquot 100 µl Standard Diluent Buffer to the control (zero) well.
- 3. Add 100 µl of appropriately diluted sample into the test sample wells. Add the solution at the bottom of each well without touching the side wall. Shake the plate mildly to mix thoroughly.
- 4. Seal the plate with a cover and incubate for 1 h at 37°C.
- 5. Remove the cover and discard the liquid. Do not wash.
- 6. Aliquot 100 µl of the detection Reagent A working solution to each well. Seal the plate with a cover and incubate for 1 h at 37°C.
- 7. Remove the cover and discard the solution. Wash the plate 3 times with 1X Wash Buffer. Fill each well completely with Wash buffer (350µL) using a multi-channel Pipette or autowasher (1-2 minute soaking period is recommended). Complete removal of liquid at each step is essential for good performance. After the final wash, remove any remaining Wash Buffer by aspirating or decanting. Invert the plate and blot it against clean absorbent paper towels.
- 8. Aliquot 100 µl of Detection Reagent B working solution into each well, seal and incubate at 37°C for 30 min.
- 9. Discard the solution and wash the plate 5 times with wash buffer as explained in step 7 (each time let the Wash Buffer stay for 1-2 min).
- 10. Aliquot 100 µl of Substrate working solution into each well. Seal the plate with a cover and incubate at 37°C for 10 min. Avoid exposure to light. The incubation time is for reference only, the optimal time should be determined by the end user.
- 11. Measure the chemiluminescence signal in a microplate luminometer immediately.

For calculation, average the duplicate readings for each set of reference standard, control and samples and substract the average

Revision date: 13/Feb/2019

abbexa 🍮

zero standard RLU (Relative Light Unit). The standard curve can be plotted as the relative RLU of each reference standard (Y) vs. the respective concentration of each standard solution (X). The PGF concentration of the samples can be interpolated from the standard

curve.

Note: If the samples measured were diluted, multiply the dilution factor by the interpolated concentration of the sample to obtain the

concentration before dilution.

C. Precautions

1. Before using the kit, centrifuge the tubes briefly to bring down the contents trapped in the lid.

Wash buffer may crystallize and separate. If this happens warm to room temperature and mix gently until the crystals are

completely dissolved.

3. Avoid foaming or bubbles when mixing or reconstituting components. Prepare the Standard dilutions within 15 min of starting the

experiment. Please use the diluted Standard for a single assay procedure and discard after use. For each step in the procedure,

total dispensing time for addition of reagents to the assay plate should not exceed 10 minutes.

4. It is recommended measuring each standard and sample in duplicate.

Do not let the wells uncovered for extended periods between incubation. Once reagents are added to the wells, avoid letting the

strips dry as this can inactivate the biological material on the plate. Incubation time and temperature must be controlled

6. Ensure plates are properly sealed or covered during incubation steps

Complete removal of all solutions and buffers during wash steps is necessary for accurate measurement readings.

Do not reuse pipette tips and tubes to avoid cross contamination.

Do not vortex the standard during reconstitution, as this will destabilize the protein. Once your standard has been reconstituted, it

should be used right away. We do not recommend reusing the reconstituted standard.

10. The Substrate solution is easily contaminated; work under sterile conditions when handling the substrate solution. The Substrate

A and B should also be protected from light. Unreacted substrate should be colorless or very light yellow in appearance. Aspirate

the dosage needed with sterilized tips and do not dump the residual solution back into the vial.

D. Precision

Intra-assay Precision (Precision within an assay): 3 samples with low, medium and high levels of PGF were tested 20 times on one

plate, respectively.

Inter-assay Precision (Precision between assays): 3 samples with low, medium and high levels of PGF were tested on 3 different

plates, 8 replicates in each plate.

CV (%) = (Standard Deviation / mean) × 100

Intra-Assay: CV<10%

Inter-Assay: CV<12%

Revision date: 13/Feb/2019



Sample Recovery (after spiking)

Sample Type	Range	Average Recovery	
Serum (n=5)	80-95%	86%	
EDTA Plasma (n=5)	82-104%	95%	
Heparin Plasma (n=5)	78-98%	92%	

Linearity

Sample Type	1:2	1:4	1:8	1:16
Serum (n=5)	89-105%	88-103%	84-101%	80-98%
EDTA Plasma (n=5)	85-102%	81-97%	78-92%	90-104%
Heparin Plasma (n=5)	82-95%	78-93%	87-104%	79-95%