Revision date: 08/Aug/2017



# Mouse High mobility group protein B3 (HMGB3) ELISA Kit

Catalog No.: abx512382

Size: 96T

Range: 0.312 ng/ml - 20 ng/ml

Sensitivity: < 0.167 ng/ml

Storage: Store standard, detection reagent A, detection reagent B and the 96-well plate at -20°C and the rest of the kit components

at 4°C.

Application: For quantitative detection of HMGB3 in Mouse Serum, Plasma, Tissue Homogenates and other biological fluids.

**Introduction:** High-mobility group protein B3 is a protein that in humans is encoded by the HMGB3 gene. This gene encodes a member of a family of proteins containing one or more high mobility group DNA-binding motifs. The encoded protein plays an important role in maintaining stem cell populations, and may be aberrantly expressed in tumour cells. A mutation in this gene was associated with microphthalmia, syndromic 13. There are numerous pseudogenes of this gene on multiple chromosomes. Alternative splicing results in multiple transcript variants.

### Principle of the Assay

This kit is based on sandwich enzyme-linked immuno-sorbent assay technology. An antibody specific to HMGB3 is pre-coated onto a 96-well plate. The standards and samples are added to the wells and incubated. Biotin conjugated anti-HMGB3 antibody is used as detection antibody. Next, Avidin conjugated to HRP is added. After TMB Substrate solution is added only wells that contain HMGB3, biotin-conjugated antibody and enzyme-conjugated Avidin will produce a blue colour product that changes into yellow after adding acidic stop solution. The intensity of the colour yellow is proportional to the HMGB3 amount bound on the plate. The O.D. absorbance is measured spectrophotometrically at 450 nm in a microplate reader, and then the concentration of HMGB3 can be calculated.

### Kit components

1. One pre-coated 96 well plate

2. Standard: 2 tubes

3. Sample Diluent: 20 ml

4. Wash Buffer (25X): 30ml

5. Detection Reagent A: 120 μl

6. Detection Reagent B: 120 μl

7. Diluent Buffer A: 10 ml

8. Diluent Buffer B: 10 ml

9. Stop solution: 10 ml

10. TMB Substrate: 10 ml

11. Plate sealer: 5

### **Material Required But Not Provided**

1. 37°C incubator

2. Microplate reader (wavelength: 450 nm)

3. High-precision pipette and sterile pipette tips

4. Automated plate washer

5. ELISA shaker

6. 1.5 ml tubes

7. Deionized or distilled water

8. Absorbent filter papers

9. 100 ml and 1 liter graduated cylinders

10. Deionised or distilled water

1

Revision date: 08/Aug/2017



#### **Protocol**

#### A. Preparation of sample and reagents

#### 1. Sample

Isolate the test samples soon after collecting, analyze immediately or store at 4°C for up to 5 days. Otherwise, store at -20°C for up to one month or -80°C for up to two months to avoid loss of bioactivity. Avoid multiple freeze-thaw cycles.

- **Serum:** Samples should be collected into a serum separator tube. Coagulate the serum by leaving the tube undisturbed in a vertical position overnight at 4°C or at room temperature for up to 60 minutes. Centrifuge at approximately 1000 × g for 20 min. Analyze the serum immediately or aliquot and store at -20°C or -80°C.
- Plasma: Collect plasma using heparin or EDTA as an anticoagulant. Centrifuge for 15 minutes at 1000 × g within 30 minutes of collection. Assay immediately or aliquot and store at -20°C. Avoid hemolysis and high cholesterol samples.
- **Tissue homogenates:** The preparation of tissue homogenates will vary depending upon tissue type this is just an example. Rinse tissues with ice-cold PBS to remove the excess of blood. Weigh before homogenization. Finely mince tissues and homogenize with a tissue homogenizer on ice in PBS and sonicate the cell suspension. Centrifuge the homogenates at 5000 × g for 5 min and collect the supernatant. Assay immediately or aliquot and store at -20°C.
- Other biological fluids: Centrifuge at approximately 1000 × g for 20 min to remove precipitant. Analyze immediately or aliquot and store at -20°C or -80°C.

#### Note:

- » Please bring sample slowly to room temperature. Sample hemolysis will influence the result. Hemolyzed specimen should not be used.
- » Samples must be diluted so that the expected concentration falls within the kit's range.
- » If the sample are not indicated in the manual's applications, a preliminary experiment to determine the validity of the kit will be necessary.
- » Fresh samples or recently obtained samples are recommended to prevent protein degradation and denaturalization that may lead to erroneous results.
- » Always use non-pyrogenic, endotoxin-free tubes for blood collection.

#### 2. Wash buffer

Dilute the concentrated Wash buffer 25-fold (1/25) with distilled water (i.e. add 30 ml of concentrated wash buffer into 720 ml of distilled water).


#### 3. Standard

Bring samples and all kit components to room temperature. Reconstitute the Lyophilized Standards with 1 ml of Sample Diluent to make the 20 ng/ml Standard Solution, which serves as the highest standard. Allow the reconstituted 20 ng/ml standard to sit for 15 minutes with gentle agitation prior to carrying out the serial dilutions; avoiding foaming or bubbles. (Note: Do not dilute the standard directly in the plate). Label 6 tubes with 10 ng/ml, 5 ng/ml, 2.5 ng/ml, 1.25 ng/ml, 0.625 ng/ml and 0.3125 ng/ml respectively. Aliquot 0.5 ml of the Sample Diluent into each tube. Add 0.5 ml of 20 ng/ml standard solution into the 1st tube and mix thoroughly. Transfer 0.5 ml from 1st tube to 2nd tube, mix thoroughly, and so on.

Revision date: 08/Aug/2017



20 ng/ml HMGB3 Solution

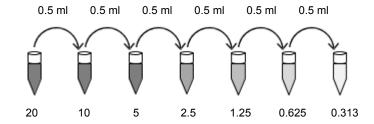

## 4. Detection Reagent A and B Preparation

Centrifuge Detection Reagent A and B briefly before use. Detection Reagent A and B should be diluted 100-fold with Diluent Buffer A and B respectively and mixed thoroughly. Pipette with a slow, smooth action to reduce volume errors. The solution should be prepared no more than 2 hours prior to the experiment. Please discard after use.

### **B. Assay Procedure**

Equilibrate the kit components and samples to room temperature before use. It is recommended to plot a standard curve for each test.

- 1. Set standard, test sample and control (zero) wells on the pre-coated plate respectively, and then, record their positions. It is recommended to measure each standard and sample in duplicate.
- 2. Add 100 µl of the diluted standards into the standard wells. Aliquot 100 µl Sample Diluent to the control (zero) well.
- 3. Add 100 µl of appropriately diluted sample into the test sample wells. Add the solution at the bottom of each well without touching the side wall. Shake the plate mildly to mix thoroughly.
- Seal the plate with a cover and incubate for 2 h at 37°C.
- Remove the cover and discard the liquid. Do not wash.
- Aliquot 100 μl of the detection Reagent A working solution to each well. Seal the plate with a cover and incubate for 1 h at 37°C.

**Note:** If Detection Reagent A appears cloudy, warm the reagent to room temperature and mix gently until the solution appears uniform.

Discard the solution and wash the plate 3 times with wash buffer. Do not let the wells completely dry at any time.

Manual Washing: Discard the solution without touching the side walls and and wash the plate three times. Fill each well completely (approximately 400 µl) with Wash buffer and incubate on an ELISA shaker for 2 min. Invert the plate each time and decant the contents; tap it 4-5 times on absorbent paper towel to completely remove the liquid.

**Automated Washing:** Discard the solution and wash the plate three times overfilling the wells with Wash buffer. After the final wash invert the plate, decant the contents; tap it 4-5 times on absorbent paper towel to completely remove the liquid. It is recommended that the washer be set for a soaking time of 1-2 min.

- 8. Aliquot 100 µl of Detection Reagent B working solution into each well, seal and incubate at 37°C for 60 min.
- 9. Repeat the wash process (Step 7) for a total of 5 times. Discard the Wash Buffer and blot the plate onto paper towels to completely remove the liquid.
- 10. Aliquot 90 µl of TMB Substrate into each well. Seal the plate with a cover and incubate at 37°C for 15-30 min. Avoid exposure to light. The incubation time is for reference use only, the optimal time should be determined by end user. Do not exceed 30 min.

Revision date: 08/Aug/2017

abbexa 🥱

11. Add 50 µl of Stop solution into each well. There should be a colour change to yellow. Gently tap the plate to ensure thorough

mixina.

12. Ensure that there are no fingerprints or water on the bottom of the plate, and that the fluid in the wells is free of bubbles. Measure

the absorbance at 450 nm immediately.

For calculation, (the relative O.D.450) = (the O.D.450 of each well) - (the O.D.450 of Zero well). The standard curve can be plotted as the relative O.D.450 of each standard solution (Y) vs. the respective concentration of the standard solution (X). Log-log curve fitting is

recommended for data analysis. The HMGB3 concentration of the samples can be interpolated from the standard curve.

Note: If the samples measured were diluted, multiply the dilution factor by the concentrations from interpolation to obtain the

concentration before dilution.

C. Precautions

1. Before using the kit, centrifuge the tubes briefly to bring down the contents trapped in the lid.

2. Wash buffer may crystallize and separate. If this happens warm to room temperature and mix gently until the crystals are

completely dissolved.

3. Avoid foaming or bubbles when mixing or reconstituting components. Prepare the Standard solutions within 15 min of starting the

experiment. Please use the diluted Standard for a single assay procedure and discard after use. For each step in the procedure,

total dispensing time for addition of reagents to the assay plate should not exceed 10 minutes.

4. It is recommended measuring each standard and sample in duplicate.

5. Do not let the wells uncovered for extended periods between incubation. Once reagents are added to the wells, avoid letting the

strips dry as this can inactivate the biological material on the plate. Incubation time and temperature must be controlled.

6. Ensure plates are properly sealed or covered during incubation steps.

Complete removal of all solutions and buffers during wash steps is necessary for accurate measurement readings.

8. Do not reuse pipette tips and tubes to avoid cross contamination.

Do not vortex the standard during reconstitution, as this will destabilize the protein. Once your standard has been reconstituted, it

should be used right away. We do not recommend reusing the reconstituted standard.

10. The TMB Substrate solution is easily contaminated; work under sterile conditions when handling the TMB substrate solution. The

TMB Substrate solution should also be protected from light. Unreacted substrate should be colorless or very light yellow in

appearance. Aspirate the dosage needed with sterilized tips and do not dump the residual solution back into the vial.

D. Precision

Intra-assay Precision (Precision within an assay): 3 samples with low, medium and high levels of HMGB3 were tested 20 times on

one plate, respectively.

Inter-assay Precision (Precision between assays): 3 samples with low, medium and high levels of HMGB3 were tested on 3 different

plates, 8 replicates in each plate.

CV (%) = (Standard Deviation / mean) × 100

Intra-Assay: CV ≤ 10%

Abbexa Ltd., Cambridge Science Park, Cambridge, CB4 0EY, UK www.abbexa.com · Email: info@abbexa.com · Phone: +44 (0) 1223 755950 · Fax: +44 (0) 1223 755951

Revision date: 08/Aug/2017



Inter-Assay: CV ≤ 10%

